

Installation Instructions For

Handrail Wallstrip MS26

Wall Mounted Handrails

Ecoglo Australia
Email: info@ecoglo.com
Ph: +61 3 8691 5288
www.ecoglo.com.au

Ecoglo New Zealand
Email: info@ecoglo.com
Ph: +64 3 348 3781
www.ecoglo.co.nz



Handrail Wallstrip - MS26 Wall Mounted Handrails

1. Preparing the Wall Surface

- Thoroughly clean the wall surface, if necessary use an industrial strength cleaner.
- Remove any loose paint or sealant and then allow the surface to dry.
- Wall must be clean and dry for adhesive tape to adhere.


2. Alignment

- Using a pencil, mark a line along the wall parallel to the handrail.
- This will be used as a guideline to position the MS26 in line with the handrail.

Note: The MS26 strip must be installed within **100mm horizontally** and **50mm vertically up** from the **centre** of the handrail.



Before removing the backing tape, make sure each piece of MS26 is straight and will sit flat against the wall without any need to hold it flat. If it doesn't sit flat, carefully bend it until it does.

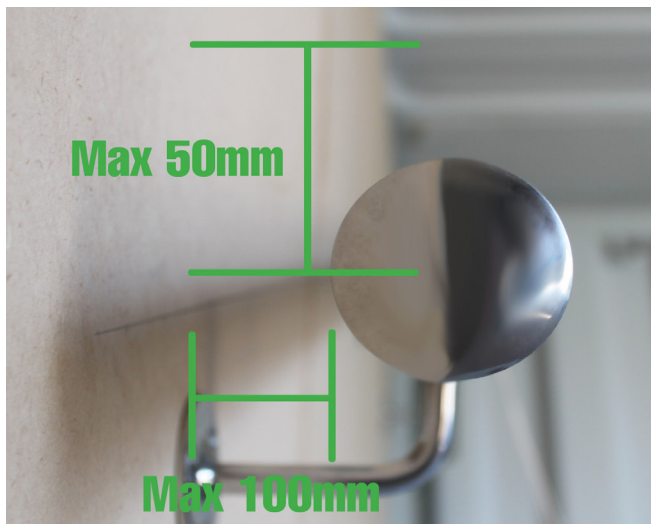

Note: A maximum gap of 100mm is acceptable between pieces and bends in the handrail. ie pieces don't need to be hard up against each other.

3. Placing the MS26 Strip

- Peel the first 50mm of backing tape back.
- Place the end of the MS26 strip on the wall in the line with your pencil mark.
- Once the full length of the piece is lined up with the guideline pull the remaining backing off the tape and push the MS26 strip firmly onto the wall as you do so.

 **ecoglo**[®]
VISIBLY BETTER


Quality
ISO 9001